

American Broadband


Connecting Your VDSL Modem

- What You Need**
- Modem & Power Cord
- Step To Take:**
- Ethernet cord (yellow)
 - Phone cord (grey)



1

• **Press Power** Button to the "OFF" position. (button will eject out)

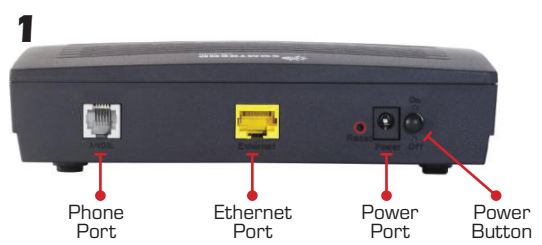


2

• **Connect** the black power adapter to the Power Port on Modem. Plug power into a Wall Outlet or an AC source.




3

• **Connect** the gray phone cord to the gray phone port and other end to a "live" phone jack.

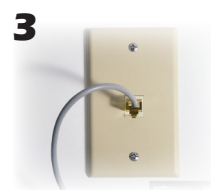

4

• **Connect** the yellow Ethernet cord to the yellow Ethernet port on the Modem. Connect other end into your Computer. Connect to the WAN port on Router (if existing or provided)*

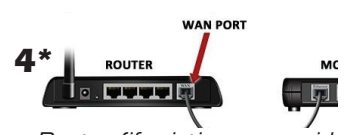

*WAN port on Router (if existing or provided)

5

• **Power On the Modem - Pause.** The power light will stay solid (red) and DSL light will flash until solid (green) until link is made. The Ethernet light(s) will flash on your Computer or Router confirming network activity.

• **Your Internet should be "LIVE" and available...**

If you have problems, questions or concerns please contact us:

American Broadband

Your Solution For SPEED

1-888-262-2661
ABBNebraska.com